


3 No. 900 x 25 x 25 hardwood stakes,  
spaced at 600 centres and driven in to  
a min. depth of 300 mm.  
No tie to be provided.

Tubestock to be planted into prepared on-site  
soil slightly below finished surface. Root-ball  
to be gently teased and protruding roots pruned.

500mm high clear plastic plant guard  
attached to each stake.

50-75 mm depth of shredded tree prunings  
to be spread around plant, keeping  
clear of stem.

Cultivate existing site soil  
to a depth of 200mm

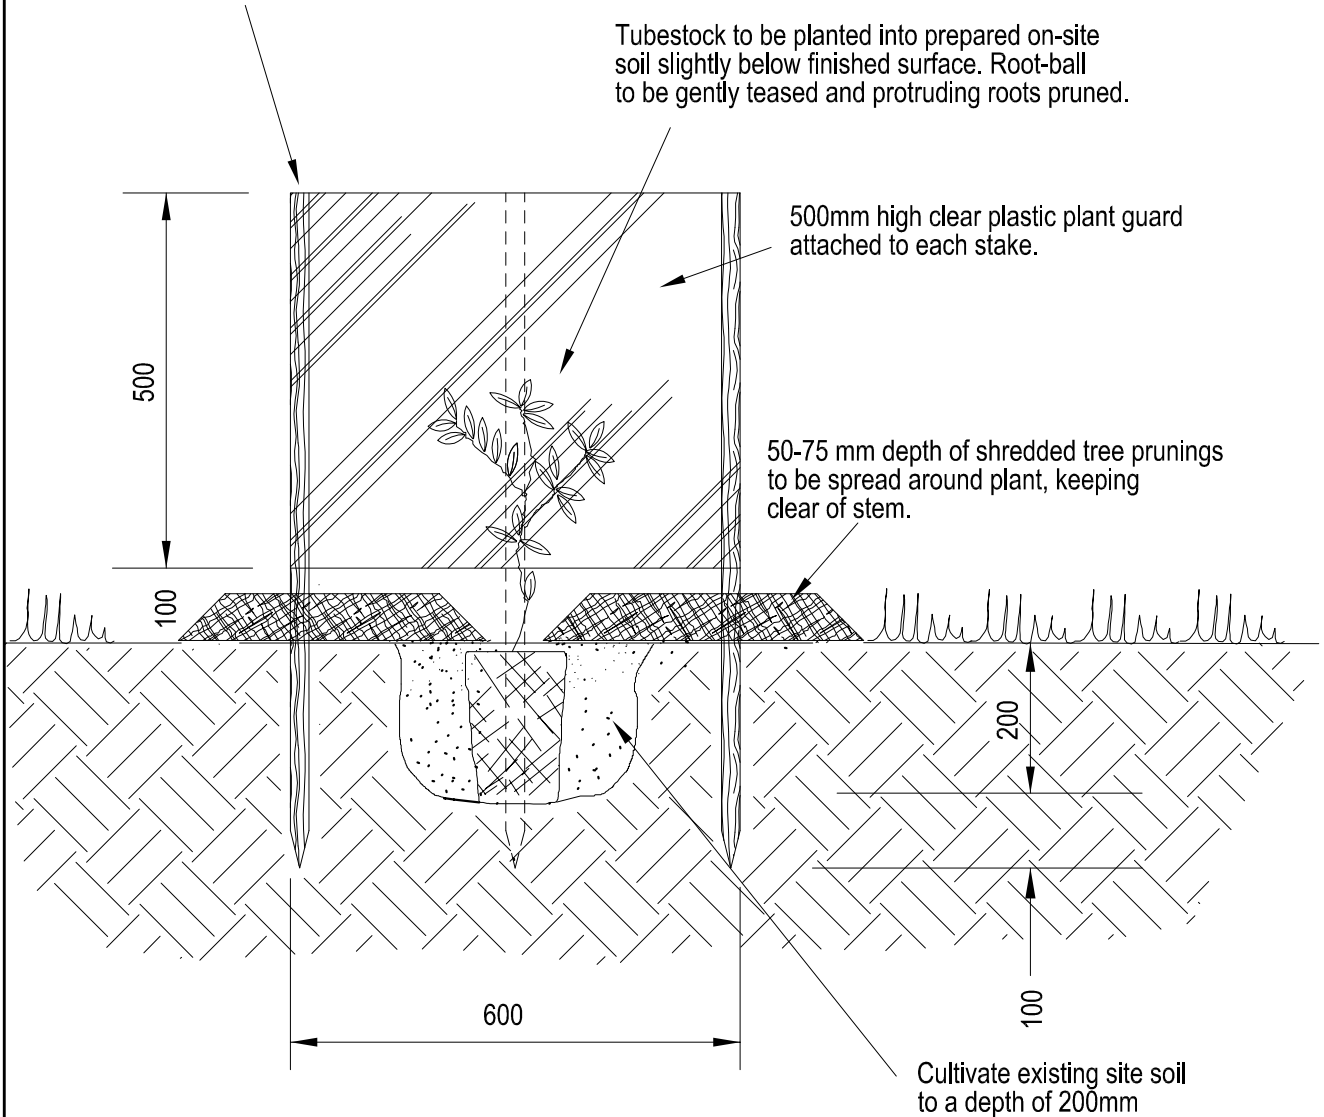

Notes

1. Location of services to be checked prior to excavation.
2. Watering in of trees shall be completed on the same day as planting, sufficiently to consolidate the backfill around the roots.




SCALE: 1 : 10

DATE: Dec 2012

APPROVED:

DRAWN: S.R./P.J.D.

CHECKED: DS

  
INFRASTRUCTURE MANAGER

**TUBE STOCK & SHRUB  
PLANTING DETAIL A**  
(140-400mm POTS)

LAST AMENDED: June 2013

**SD 522**  
PAGE 1 OF 1